

XpressChef 2c

Care & Cleaning

Daily Care and Cleaning :

PREPARE OVEN

1 Press Power ON/OFF keypad to power-off oven. The fan will run to cool the oven interior faster. Allow oven to cool down to 200°F (95°C) (Approximately 10–15 minutes with the door open and 45–60 minutes with the door closed)

2 Once cooled, carefully remove oven rack and other accessories from the cavity.


CLEAN OVEN RACK AND ACCESSORIES

3 Clean the oven rack with liquid dishwashing detergent such as Dawn[®], and a nonabrasive sponge or soft bristle brush. Allow to air-dry.

4 For other accessories, please refer to instructions included in original packaging.

CLEAN OVEN INTERIOR

5 Remove baked-on particles using a plastic scouring pad.

6 APPLY OVEN CLEANER:  Do NOT spray cleaning solution directly onto back-wall perforations. A Spray oven inner door, sides, and floor with ACP Oven Cleaner. Allow to soak 2–5 minutes. B Spray damp towel with ACP Oven Cleaner and wipe oven inner back-wall.

7 CLEAN AND WIPE OVEN INTERIOR: Wipe the oven interior using a damp clean towel. Rinse towel and wring dry. Repeat 2–3 times to remove remaining cleaner and debris.

8 APPLY OVEN SHIELD: When oven is clean, spray damp towel with ACP Oven Shield Protectant and wipe all interior surfaces. Do not remove ACP Oven Shield Protectant.

 
 
 
9 Reinstall oven rack in oven.

CLEAN OVEN EXTERIOR

10 CLEAN EXTERIOR DOOR AND SURFACES with a clean cloth, sponge or nylon pad; using a mild detergent and warm water solution.

11 CLEAN CONTROL PAD AND SCREEN with a dry or damp microfiber cloth. ⚠ Do NOT use Windex or other harsh chemicals. Do NOT spray liquid on the screen.

Maintaining your oven every day ensures that your oven will have a longer operational life!

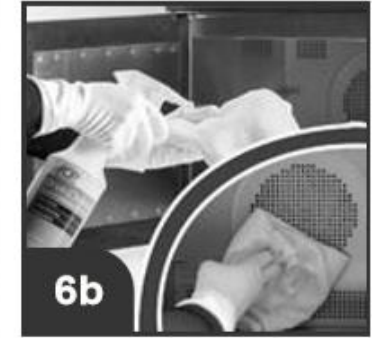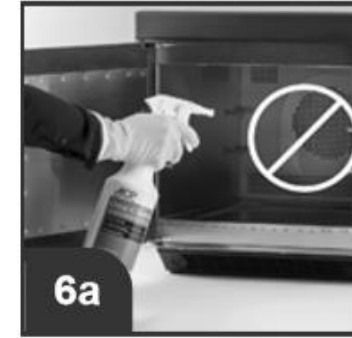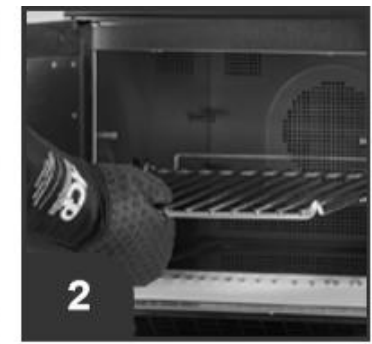

Weekly Cleaning !!!!!

CLEAN AIR FILTER Air filter is located below oven door. A FOR OVENS WITH NON-REMOVABLE AIR FILTER: Wipe louvers using a damp clean towe. B FOR OVENS WITH MAGNETIC/REMOVABLE AIR FILTER: Remove magnetic air filter. Wash filter in a mild detergent solution made with warm water. Rinse and dry thoroughly. Reinstall filter on the oven base. For STYLE 1 ovens with AF10 accessory, see image B-1. For STYLE 2 ovens, see image B-2



Cleaning Solutions

- **CL10W** Cleaner, non-caustic spray for routine cleaning.
- **PR10W** Oven Shield protectant, non-caustic spray for routine cleaning



**Do not use a metal braided sponge!!!!
Small pieces can break off and end up
in the ventilation !!!!
Metal will damage the Teflon liner!!!!!!**